





ALTERNATIVE DOOR BRACKETS

Door bracket for screw fixing without milling on the door

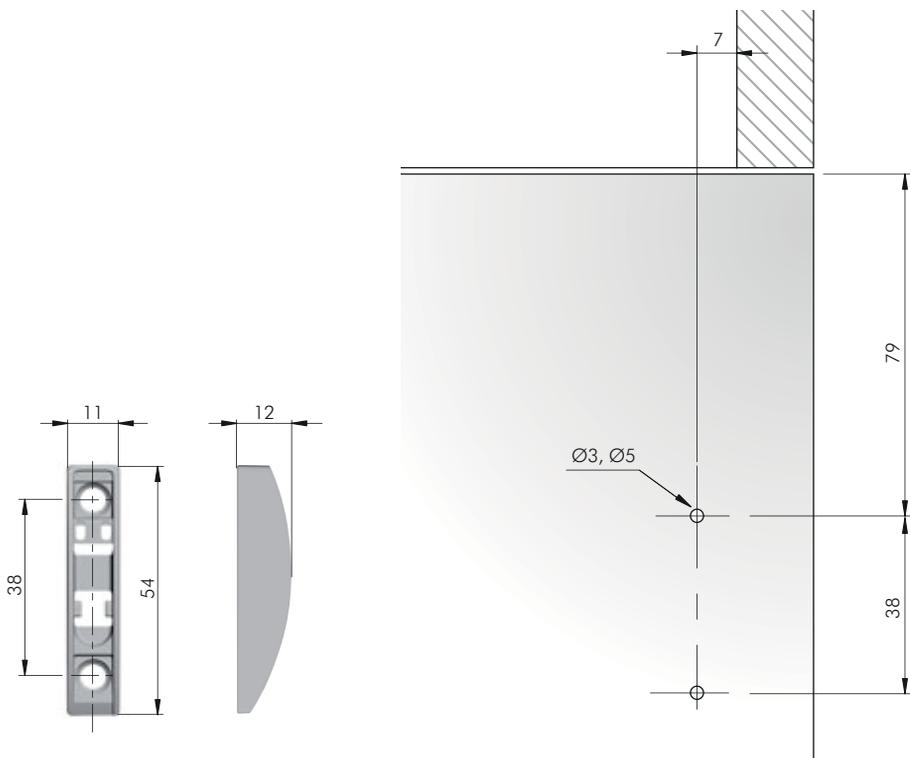

ZA	 =
	 
P1902081YA	YQ

8

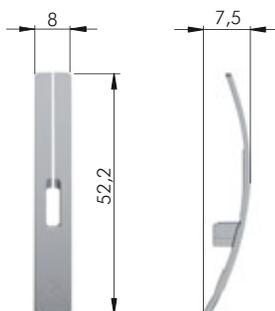


EP	 =
	 
P1902091EW	EE

NOTE: Finishes matching between cover caps and door bracket:

EW → YA
EE → YQ



FIXING ACCESSORIES

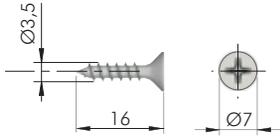


= Ø 3 mm +

= PZ2

= 10.000 pcs.

60101390ZN

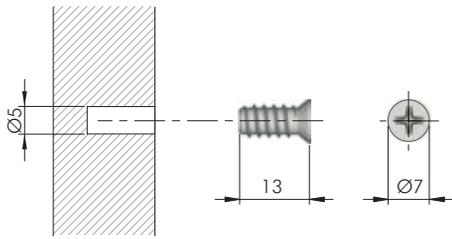

= Ø 5 mm +


= PZ2

= 5000 pcs.


60503050ZN

8

DOOR BRACKET INSTALLATION

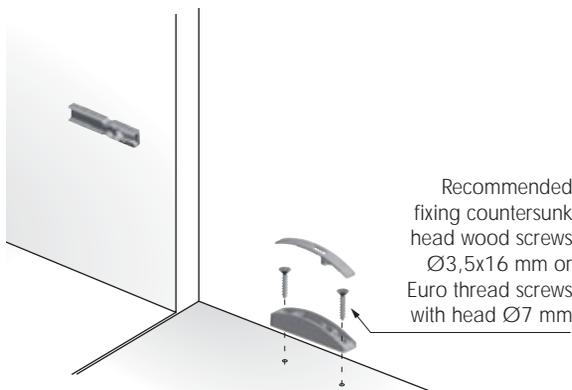

WIRE INSERTION ONTO THE DOOR BRACKET

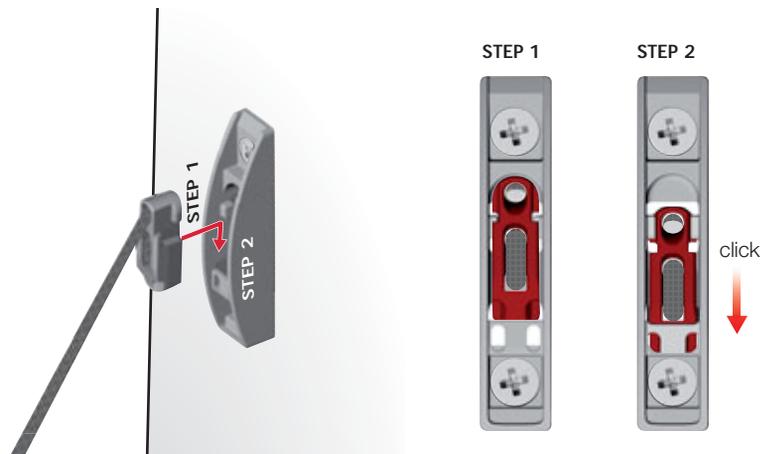

Lift the door almost completely to slot the end element of the wire into the door bracket.




DOOR BRACKETS COVER CAP INSERTION




INSTRUCTIONS FOR WIRE CUTTING

WIRE CUTTING WITH UNMOUNTED MECHANISM



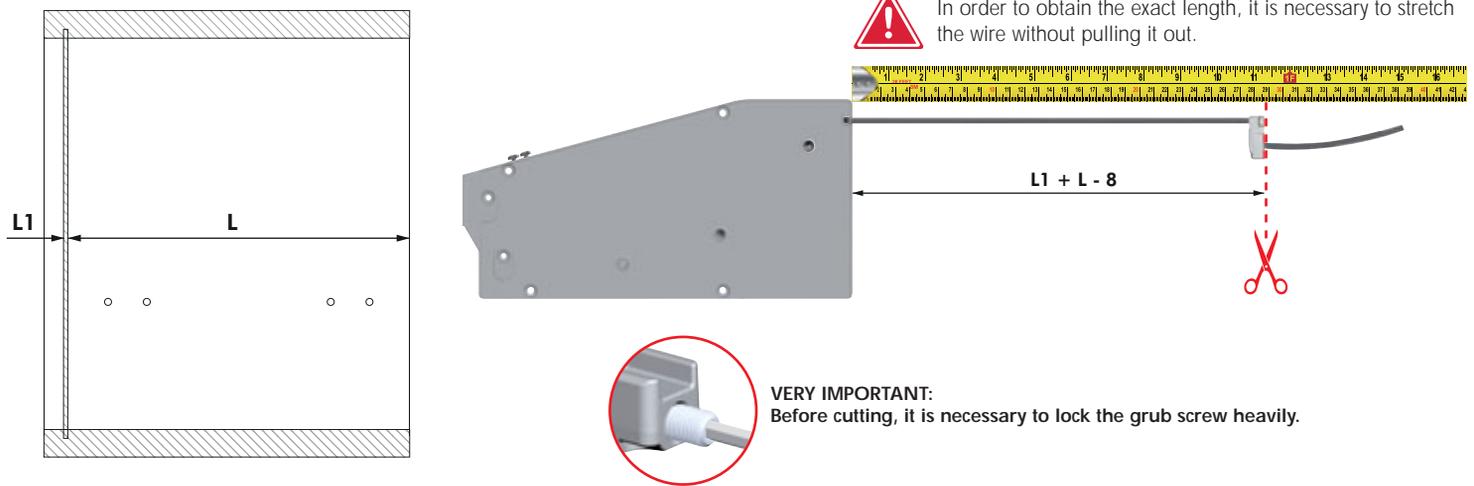


WIRE CUTTING WITH MOUNTED MECHANISM

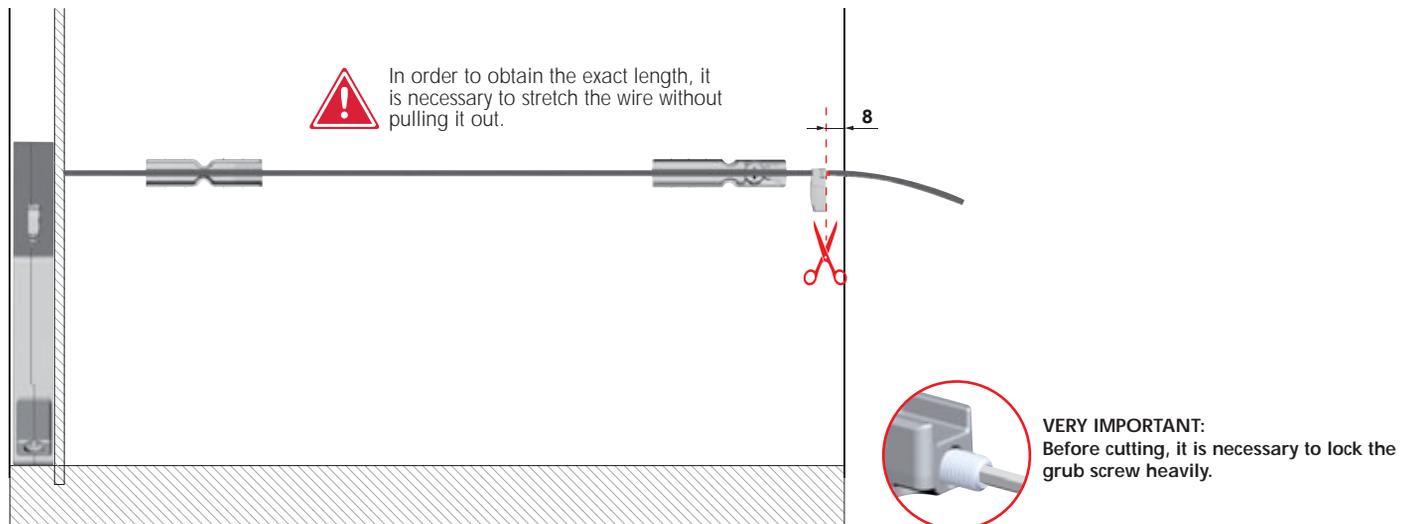




Door bracket adapter for doors with aluminium profile 20 mm thick

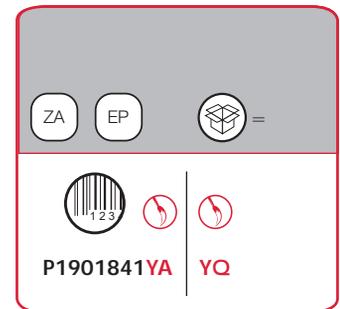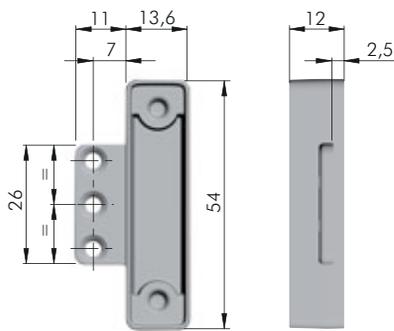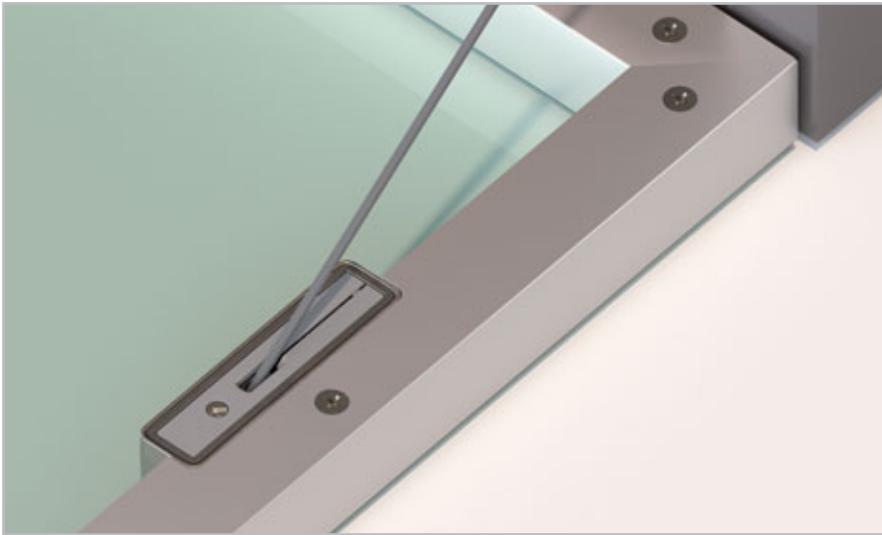


8

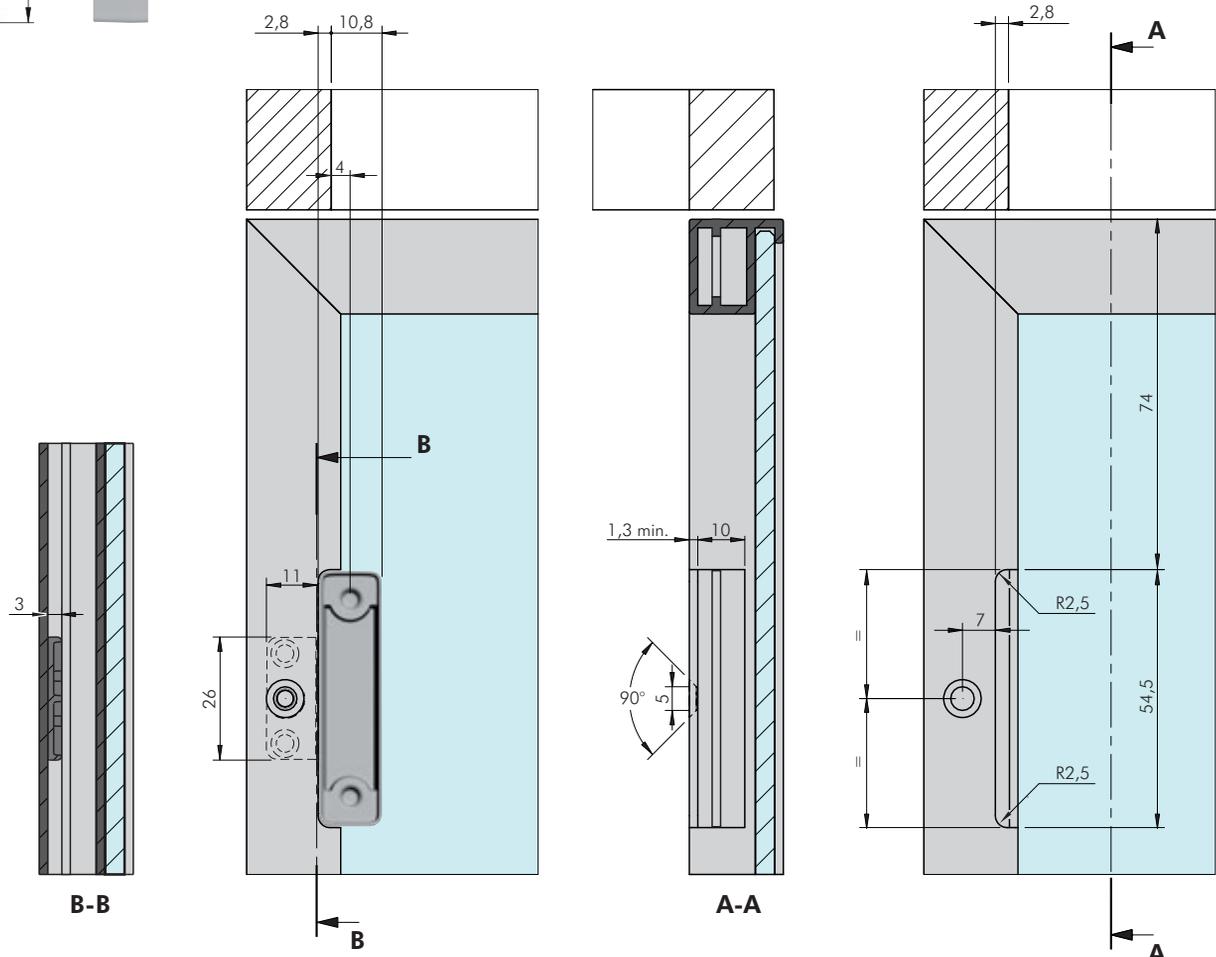




FIXING ACCESSORY

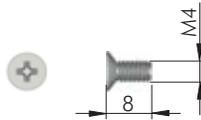


			= PZ2
	ST		= on request
			
42906010YA			

DOOR BRACKET INSTALLATION

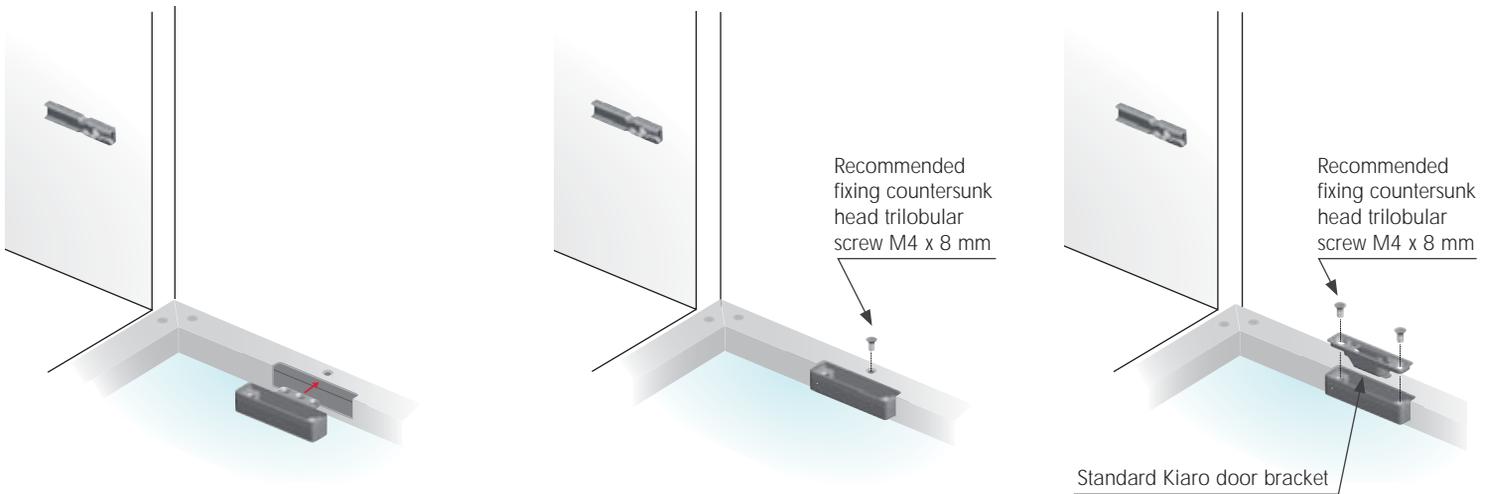

8


WIRE INSERTION ONTO THE DOOR BRACKET

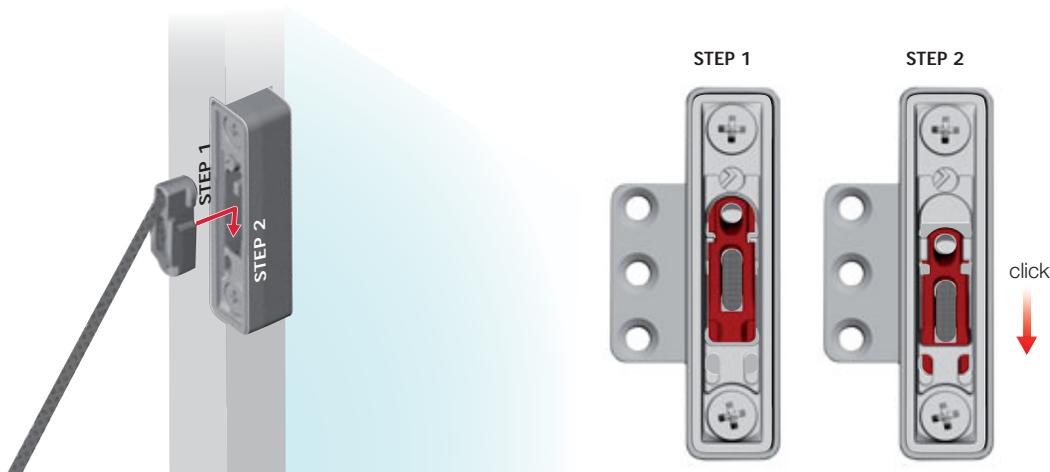

Lift the door almost completely to slot the end element of the wire into the door bracket.



DOOR BRACKETS COVER CAP INSERTION

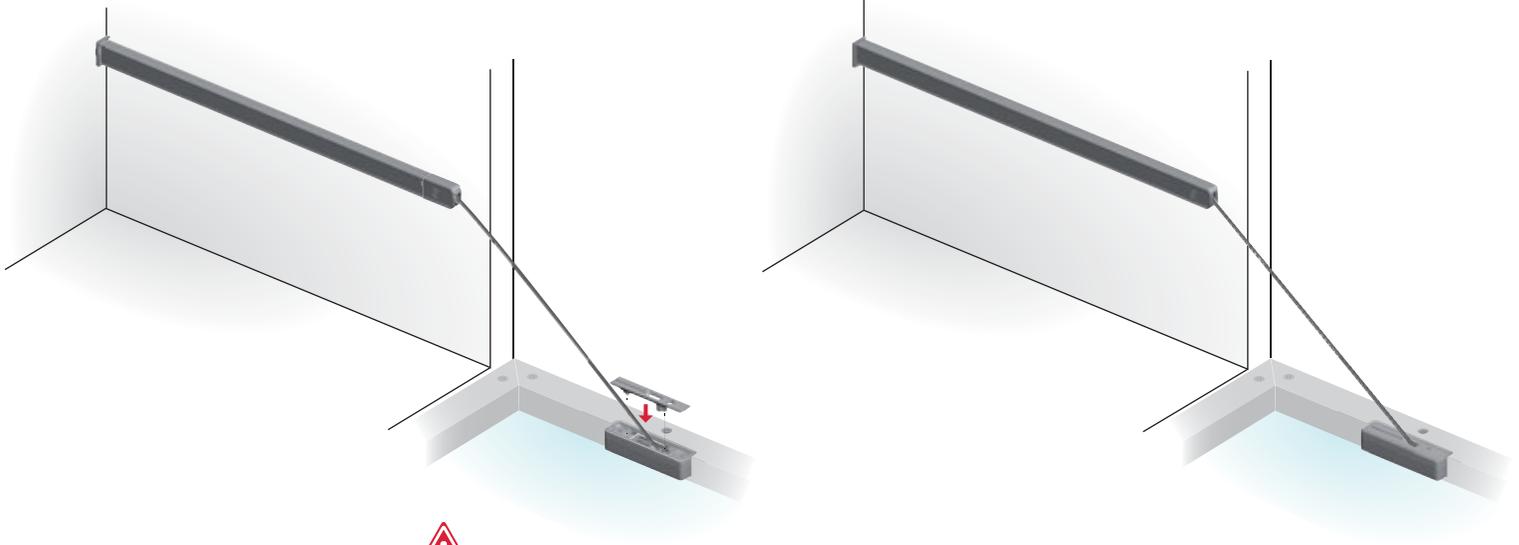

Place the cover cap on the door bracket before lifting the door.